


Manual Software Upgrade Guide

◆ Notice

1. Use the full model name of TV when manually downloading software updates.
Ex) 47LX9500-UA : The Full model name must include the suffix "-UA".
2. Do not unplug the TV power cord while the software is upgrading.

1. Different methods to verify the full model name of the TV.

Method① Check the label on the TV (Side or Rear).

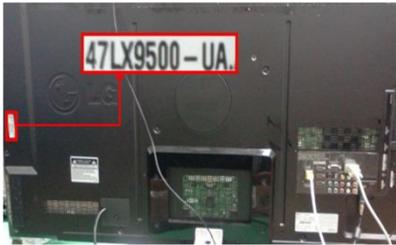

or




Method② Check the Menu – Non-Smart TV models


- 1) Press [MENU] key of remote control.
- 2) Press  (Red) key of remote control.
 (Red) key is "Customer Support".



- 3) Select "Product/Service Info."

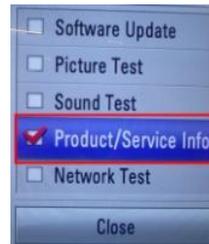

- 4) Check the "Model/Type"

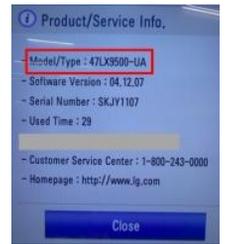


Method③ Check SETUP - Smart TV models

- 1) Press [Home] key on the remote control.
- 2) Select "SETUP".




- 3) Move to "SUPPORT"

- 4) Select "Product/Service Info."

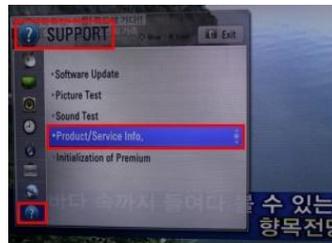

- 5) Check "Model/Type"

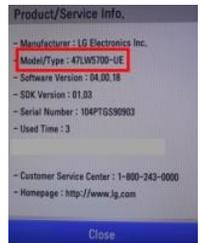

2. Method to verify the model name and purpose of software upgrade on the website.


- ① Click the "Drivers & Software".
- ② Click the Software name.

- ③ Check the Full model name (Ex. 47LX9500-UA) and purpose of Software upgrade.




1 Downloading Software Updates

① Select your country after connecting to www.lg.com.

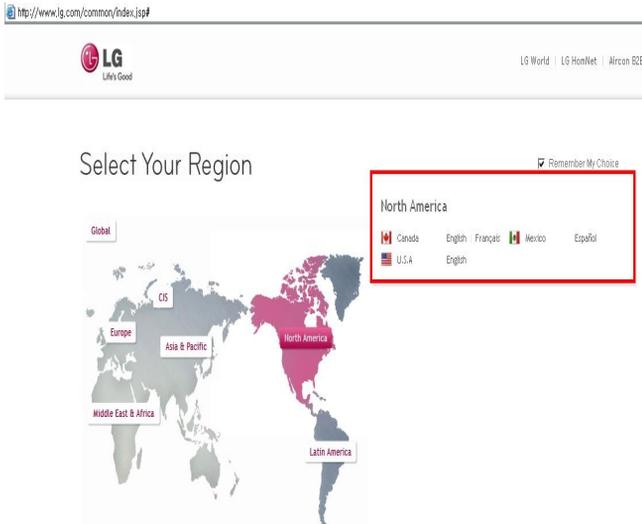


② Click "Support".

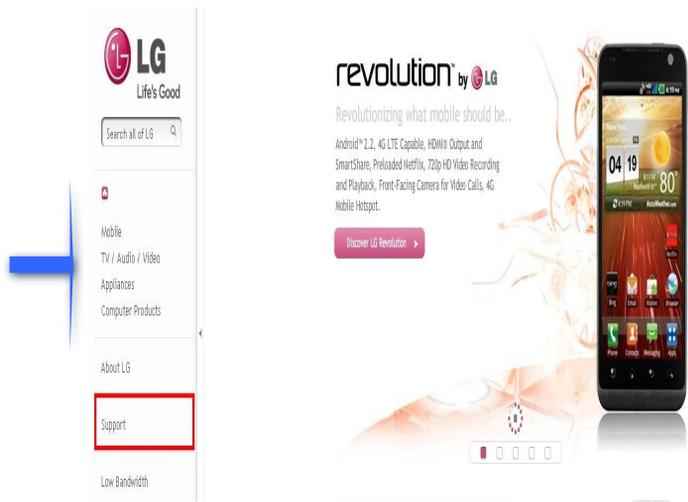


③ Fill in your Model name.

Ex. 47LX9500

④ Click "Continue".

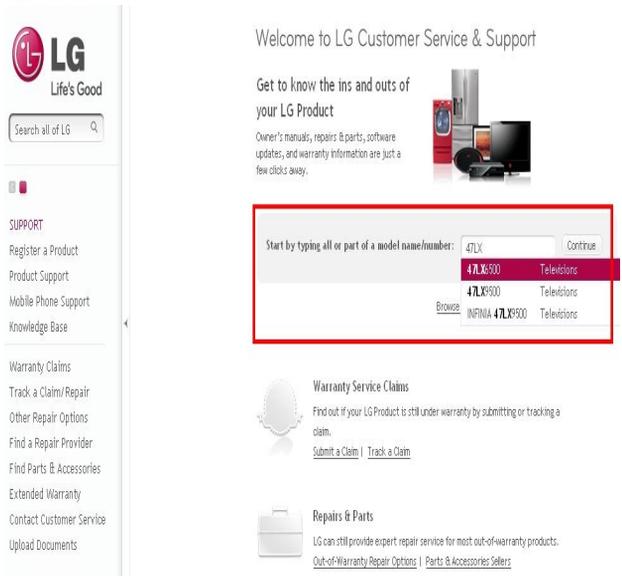


⑤ Click the Model name.

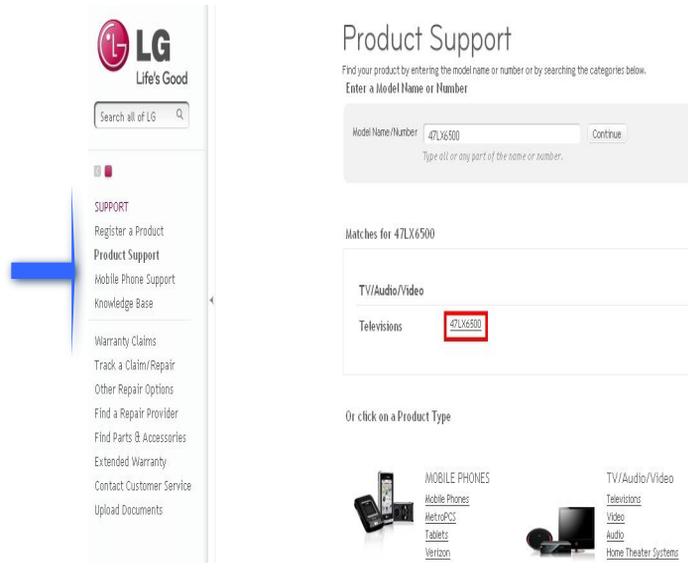


⑥ Click "Drivers & Software".

⑦ Click the newest Software Updates name.

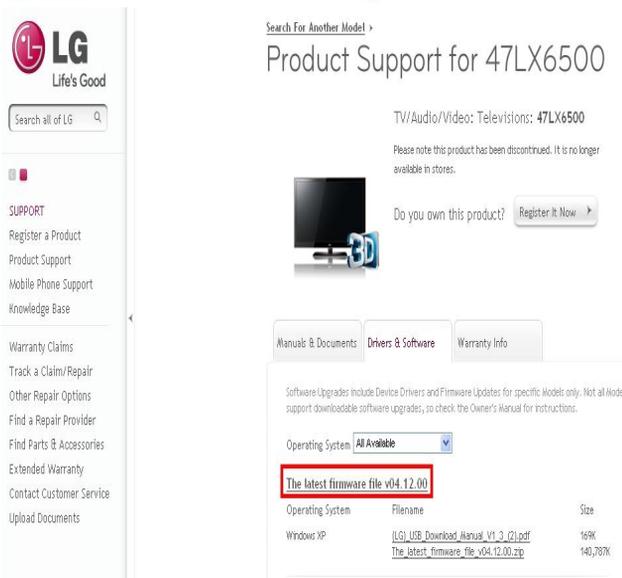


⑧ Check the Full model name (Ex. 47LX9500-UA) and purpose of software upgrade.

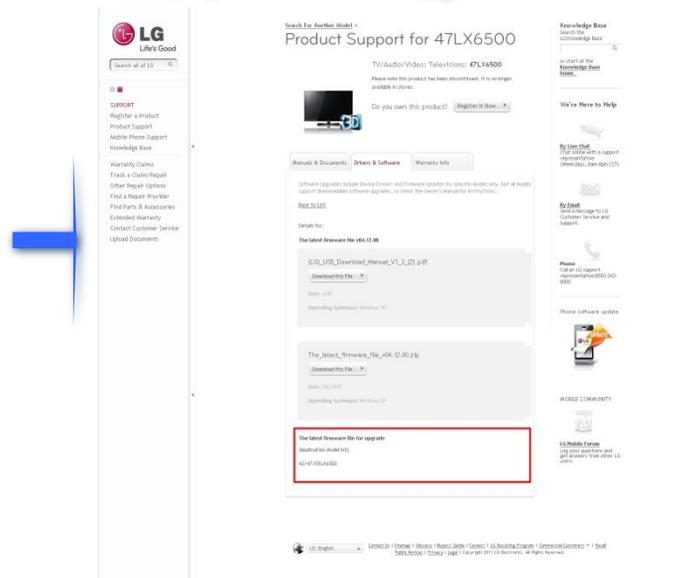

2 Downloading a software update to a USB Memory Drive.

① Click the “Download this File” to save it to the PC.

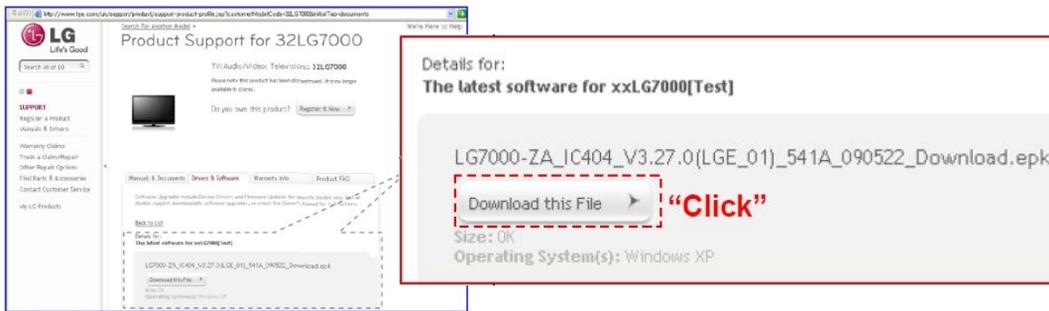


② Unzip the software file.

③ Insert the USB memory drive into a USB Port on your PC.


④ Make a folder on the USB drive named “LG_DTV”.

⑤ Save the software file to the “LG_DTV” folder.

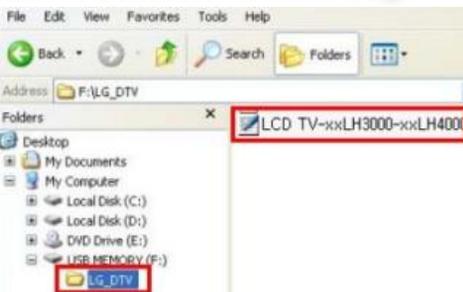

3 Insert the USB memory drive into a USB port on the TV.

• Position of USB port: Side or Rear

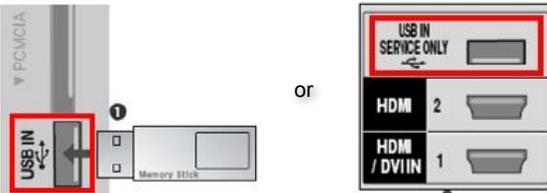

4 Running the software Upgrade.

① If the below message appears, please select “Start”.




Note:

※ If the current software on the TV is the same or newer than that on the USB drive, the TV Software Upgrade menu will not open.

※ Some USB memory devices may not be compatible with the TV.

② After choosing start, the below message will appear.

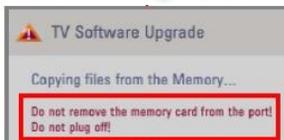

1) Please wait while the update is copied to the TV.

※ Don't remove the USB drive while this message is displayed.

※ Do not unplug the TV power cord while this message is displayed.



2) Running the software upgrade.

※ Do not unplug the TV power cord while this message is displayed.



3) After the upgrade is completed, this message is displayed.

The TV will restart automatically in 5 seconds, then the TV is now ready to use.