

Galaxy Gear Boot Recovery

Oct, 2013

HHP Global CS team

This material is a property of Samsung Electronics Co., Ltd. Any unauthorized use of this material can be punished under applicable International and/or domestic law.




Boot Recovery

Pre-Requisites

- SM-V700 sample
- USB Recovery PC Program

Boot Recovery

1. Extract SM-V700_USB_Recovery_V0.2.zip and run RecovTool_v02.exe

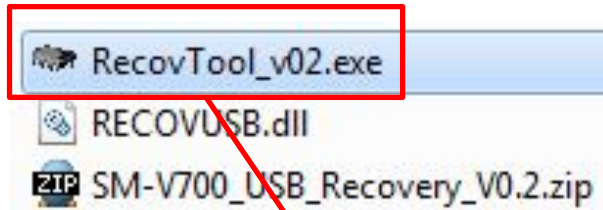


```
[USB Recovery Tool v0.2] (SM-V700_EUR_XX) : [COM1:115200bps]
Clear Screen  F/W Upgrade  Help
downloadDelay1 = 200 ms
downloadDelay2 = 3000 ms
downloadDelay3 = 50 ms
downloadDelayw = 30000 ms
autostart      = 0x0
```

※ Other USB programs should be terminated.

Boot Recovery


2. Connect the SM-V700 to PC charging(or pogo) gender.
3. Supply power to the gear, then USB status of the program will be changed to OK.

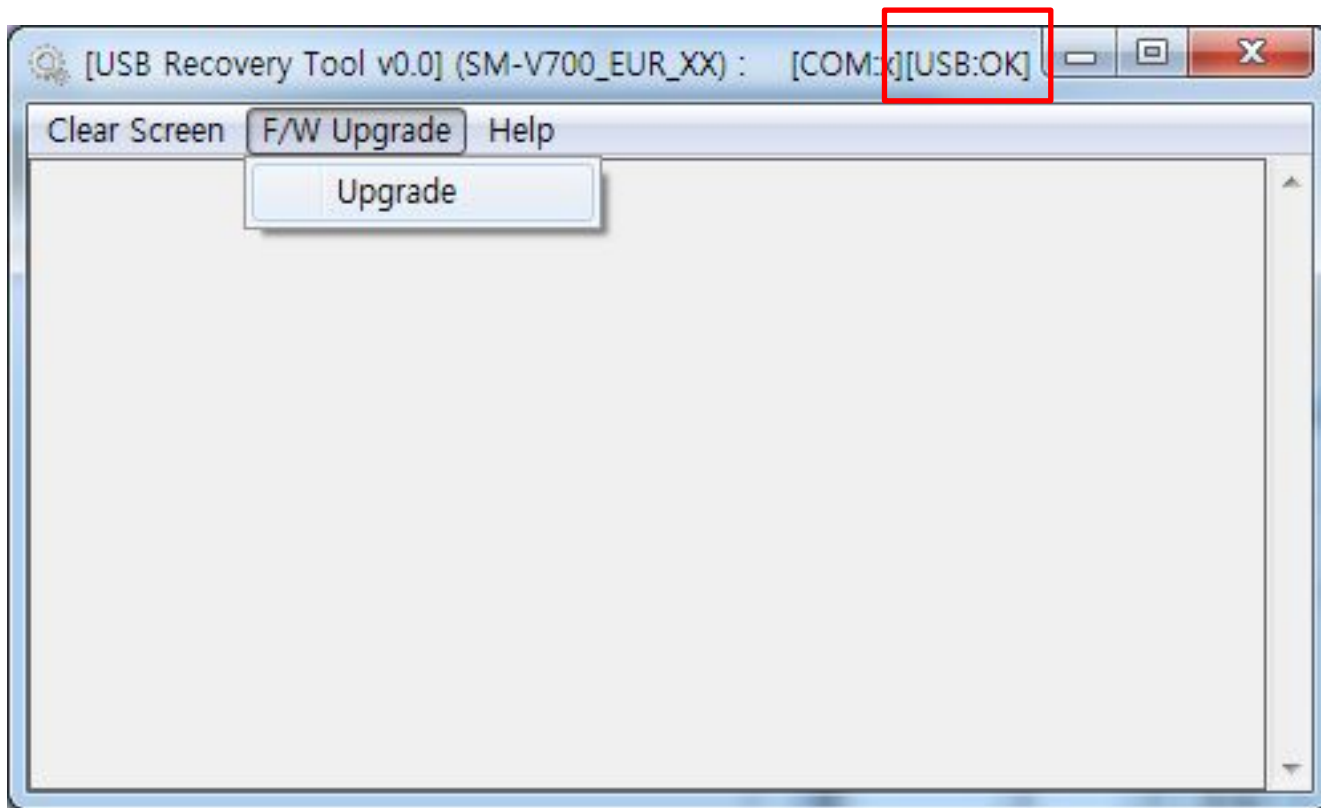

4. Select Upgrade to proceed boot recovery.
 - ✘ If no action is taken 2 seconds from USB : OK status, connection will be lost.

Boot Recovery

5. Boot recovery proceeding.

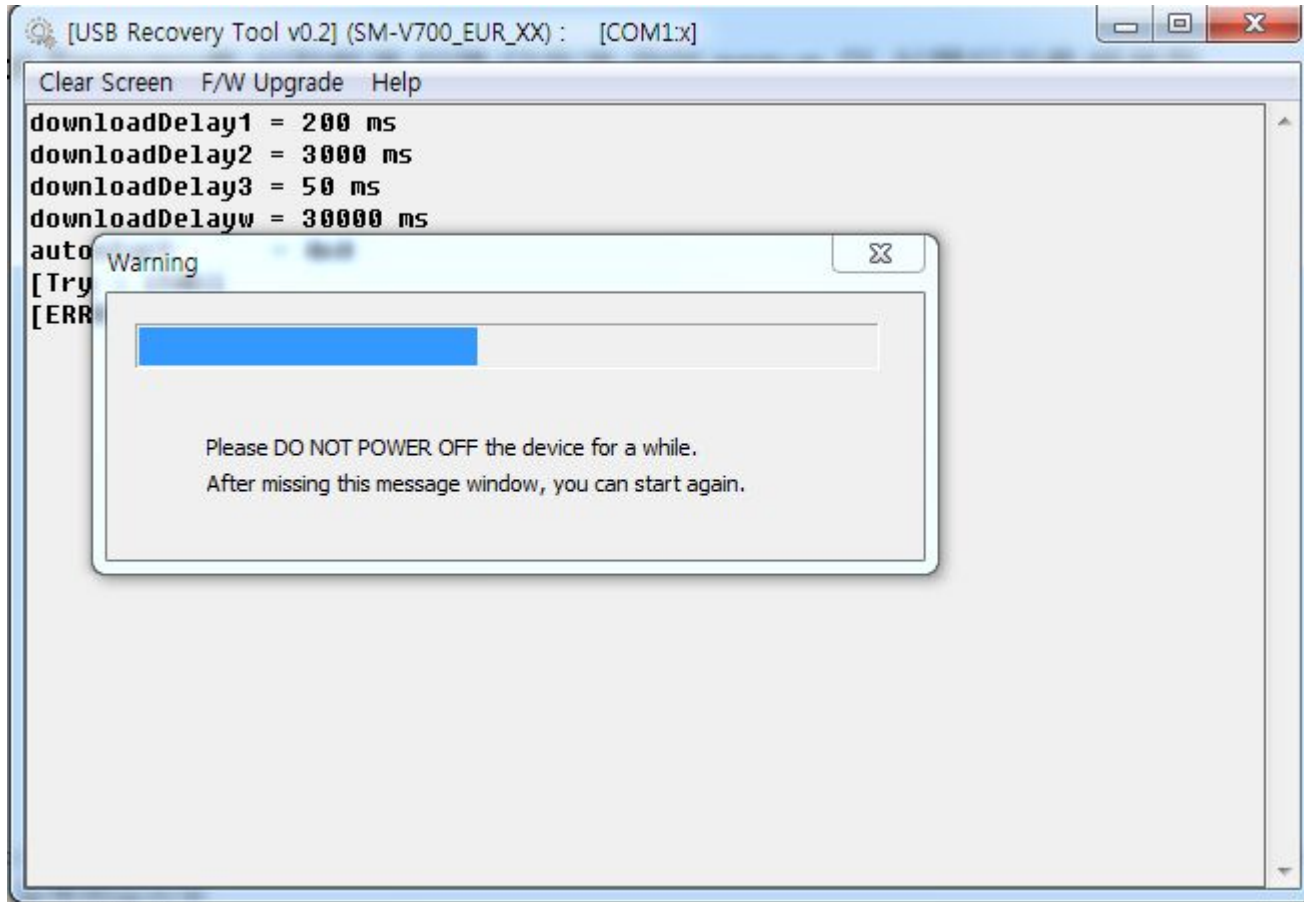

※ Do not disconnect the device while boot recovery.

(LCD is off while boot recovery.)

Boot Recovery

6. After boot recovery is finished, reset the power of the device.

The device will enter emergency mode like below.



7. Download full S/W to the device, using Odin.

※ Odin should be run after USB recovery Tool is terminated.